


Bio-Roll Installation Instructions

Drive into riverbed one round or half round timber stake per linear metre. A variety of lengths from 2 - 6m and 20cm - 50cm diameter are available.

Place Grenfix Bio-Rolls together using suitable twine or wire. Drive in stakes to the top of the Bio-Roll level.

Tie GREENFIX Bio-Rolls onto stakes using suitable twine or wire.

Backfilling may be carried out if required.

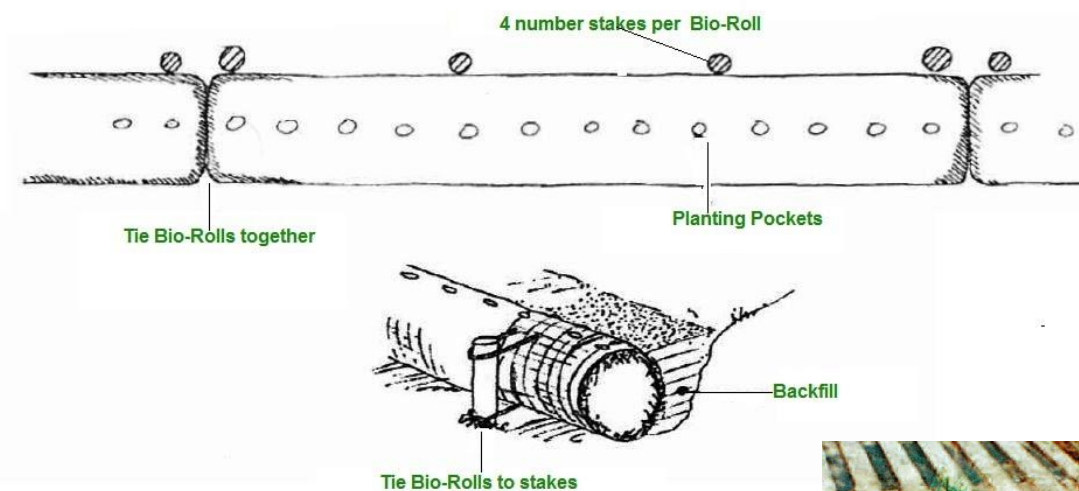

The specification presented above is to the best of our knowledge, true and accurate. Greenfix Soil Stabilisation and Erosion Control Limited (GSSEC) reserve the right to change any specification without prior notice. GSSEC cannot guarantee or offer warranty on products, unless agreed to in writing for specific conditions or for performance as the manner of handling, use and installation are beyond our control. We will not be liable for damages or losses, direct or indirect, of our GSSEC Range of Products due to the above reasons. All comparative data was correct at time of print. E&OE.