

## Greenfix Mulchmat Type 10 Installation Instructions


- Mats should be stored in a dry place.
- Existing vegetation should be removed as far as possible.
- The ground should be as even as possible.
- For slope applications dig the 150mm "V" trench at the top of the bank. See diagram "A". Pin the mat at 500mm centres in the "V" trench and back fill with soil.
- Roll out the mats, taking care to overlap all joints by 150mm, thus ensuring no daylight penetration.
- Pin the mats down using the pins supplied according to pinning pattern.
- Cover all outside edges of the Mulchmat application with soil.
- Planting can be carried out by positioning plants at the seam joints or by making cross-cut incisions in the mat. Care should be taken to ensure that the mat is snugly positioned around the plant - pinning down is advised.

### For Spat Applications


Spats are made to size required. Sizes available are 60cm, 80cm and 120cm squares with slit to centre. Entrench edges of spats and pin down to secure.

### Pinning Pattern for 2.4m wide rolls


#### A slopes up to 15 degrees

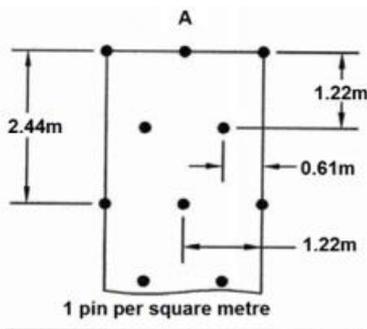



#### B slopes up to 30 degrees

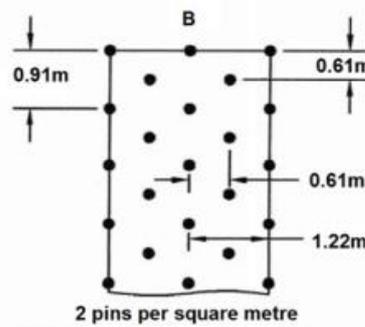

#### C slopes over 30 degrees

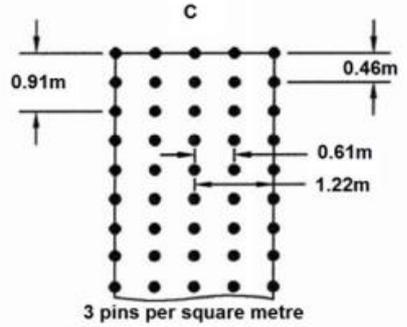

## Mulchmat Type 10 Slope Applications

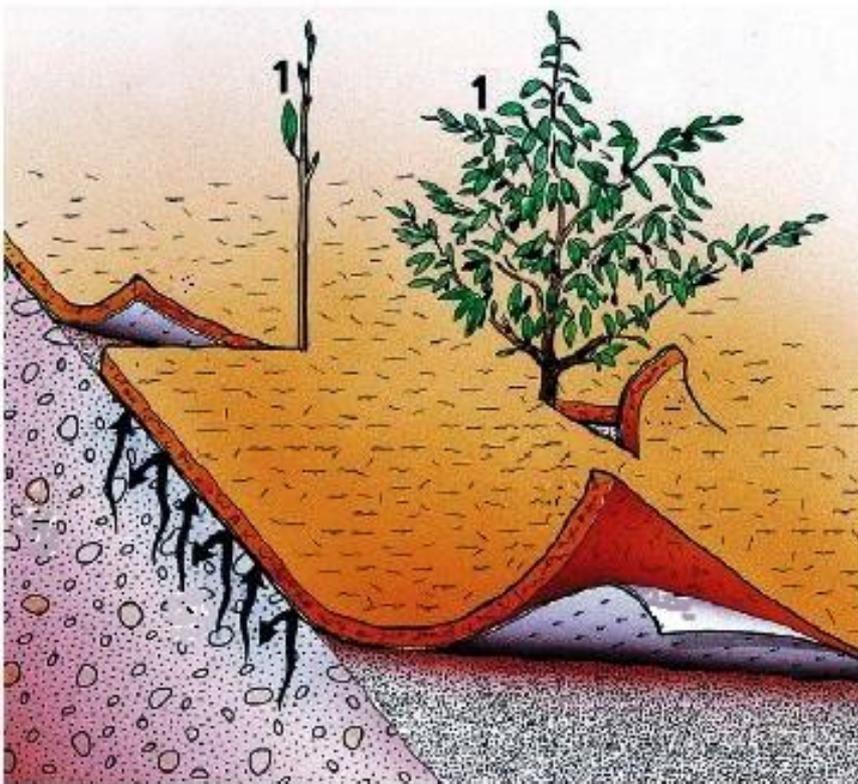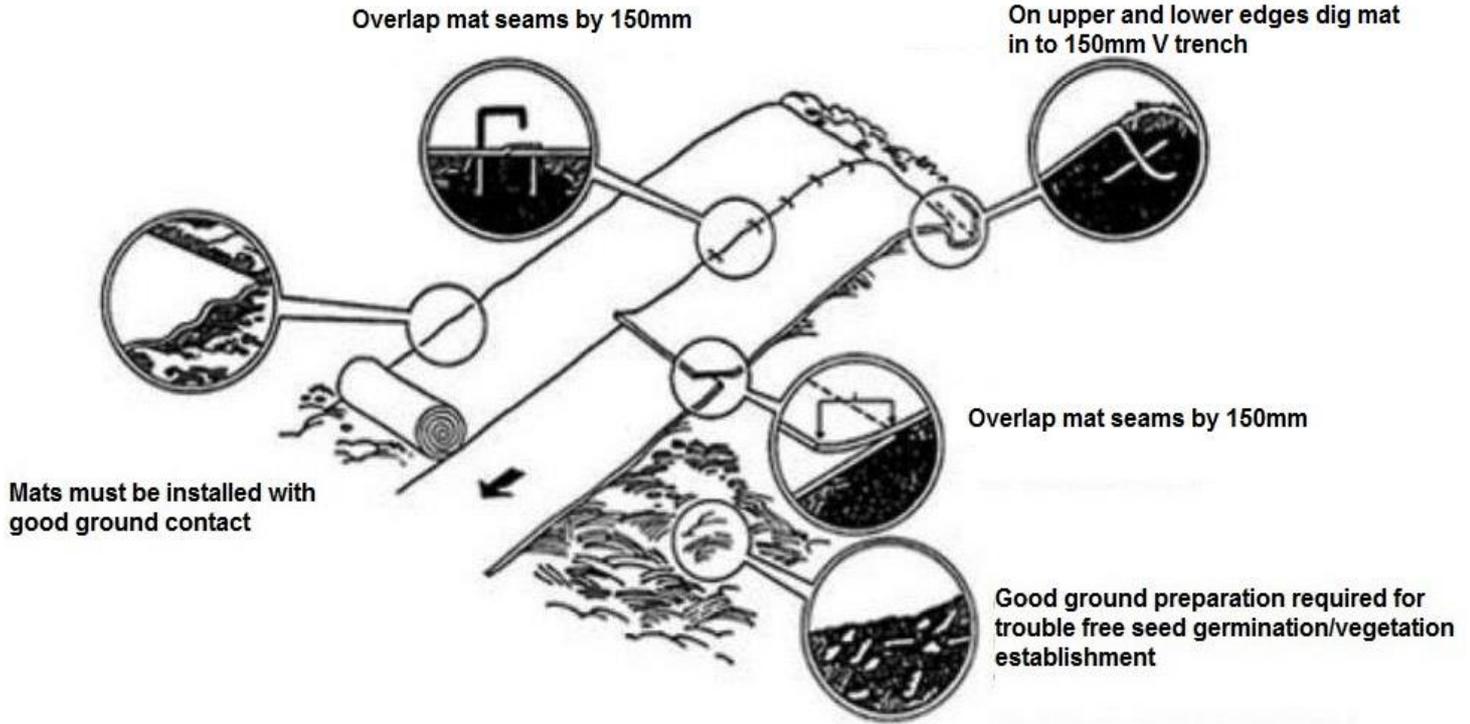

All joints should be overlapped by 150mm to ensure no daylight penetration. Pin the